


Screws for adjustment of lead-in/lead-out position.
 Vis pour réglage de position d'entrée-sortie de lecture.
 Schrauben zur Justierung von Anfangs- und
 Endrillenposition.

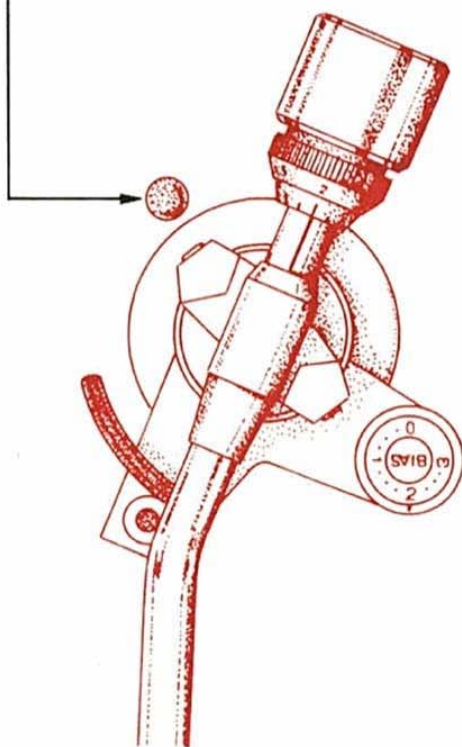

SOME USEFUL HINTS

Automatic mechanism adjustment

In normal circumstances, the adjustments of automatic operation mechanism is not necessary, since it has been factory-adjusted. Should the lead-in and lead-out position deviate from the preadjusted position, however, re-adjust as follows.

Adjustment of lead-in position:

When you move the tonearm from its rest about 35mm toward the platter you will see a rubber hole plug at the foot of the arm support. When you remove this you will see a lead-in position adjustment screw through the hole. To move the lead-in position toward the center of the record, turn the screw to the right (clockwise). To move it toward the edge of the record, turn the screw to the left (counterclockwise). For adjustments, use the driver. A half turn of the screw in either direction moves the lead-in position by about 1mm. When adjustment is over, replace the rubber plug.

Adjustment of lead-out (cut/return) position:

Set the tonearm on its rest with the plug removed, you will find another screw through the hole. To move the lead-out position toward the center of the record, turn the screw to the left (counterclockwise); to move it toward the edge of the record, turn the screw to the right (clockwise), then replace the plug.