


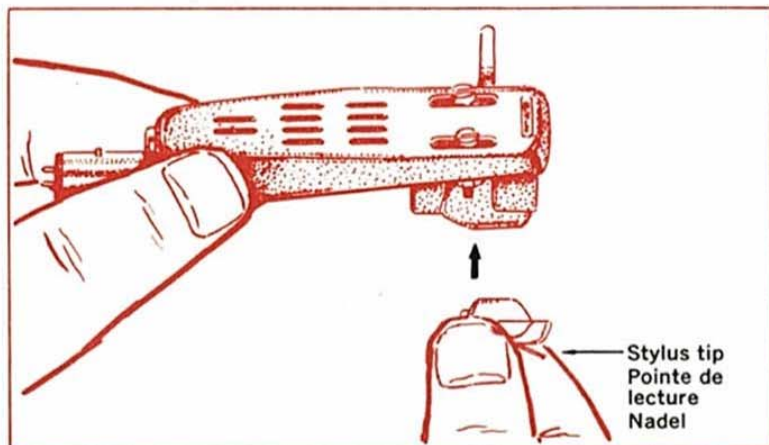

Stylus wear

The diamond-tipped stylus (Sansui SN-40X), supplied with your turntable, will provide about 500 to 800 hours of high fidelity record playback.

A worn stylus, however, will cause distorted, shallow, or crackling sounds. (Note also that the same phenomena occur when dirt and dust is allowed to accumulate on the record surface or to the stylus tip.) If you have found that unpleasant reproduction is traceable to a worn stylus (and not to a worn record, faulty amplifier, etc.), replace it. A replacement stylus is available from the nearest Authorized Sansui Service Station or from the Sansui dealer from whom you have purchased your turntable. Be sure to specify the model "SN-40X" Sansui replacement stylus.

Lubrication

Your unit requires no lubrication whatsoever. Note that application of oil to the unit's platter shaft or platter bearing may cause turntable breakdown.

Arm lifter descent time

When you use your unit after a long period of disuse, the arm lifter mechanism may tend to lower the tonearm more slowly than usual. This may also occur in periods of temperature change, such as in the changes of seasons. It will correct itself in time, and you may wish to aid the descent of the tonearm with a light touch of your finger until it does.

Turntable dismantling

Do not extract the unit's platter shaft or dismantle the motor assembly; NEVER try to touch any part inside the turntable unit. Such action may result in deterioration in performance or in mechanical breakdown.