
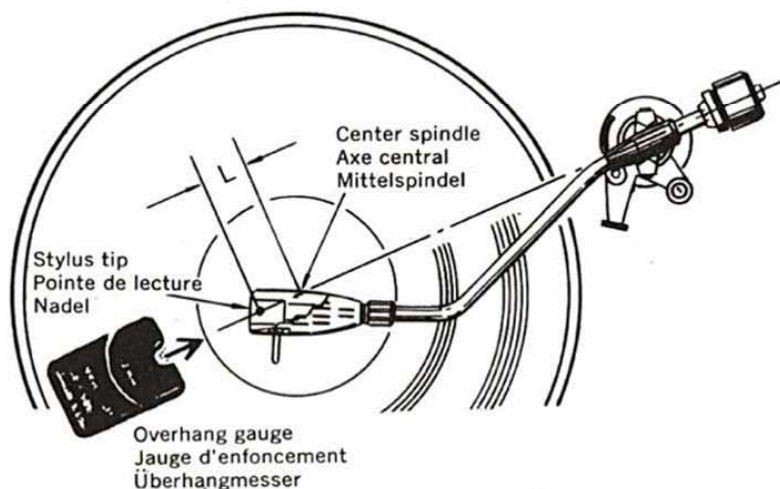
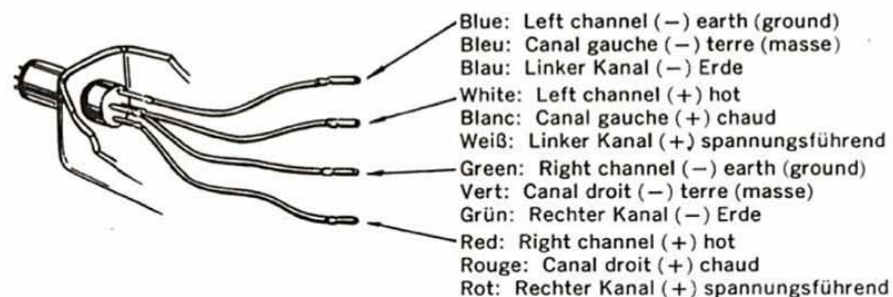


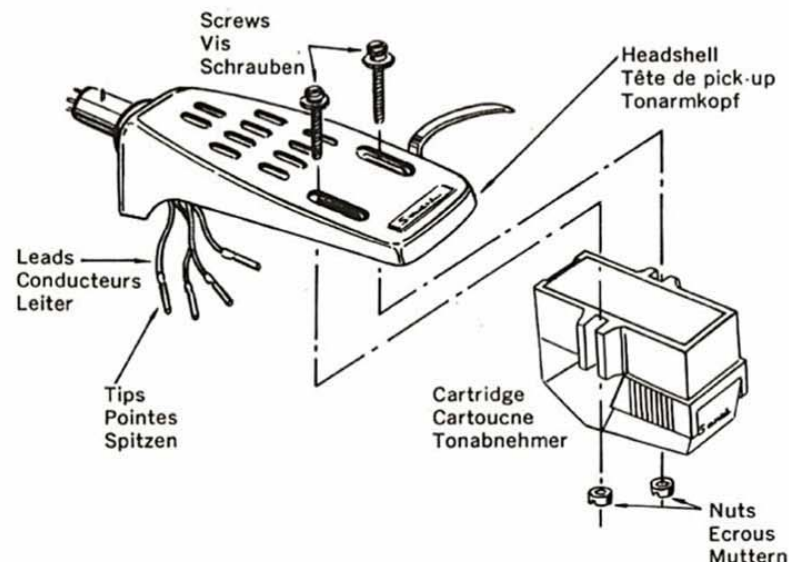

Cartridge replacement

When mounting a cartridge or headshell different from the one supplied, you must make proper cartridge connections and overhang adjustments. For tonearm horizontal balance, tracking-force, skating-force and other adjustments, refer to the section "SETUP AND CONNECTIONS."

- When you used a cartridge other than the one supplied, there may be cases you hear less hum with the grounding cable unconnected. In this case, turn the amplifier off and disconnect it.

Cartridge connections

Connect the leads of the headshell to their respective pin plugs in the cartridge. The leads are color-coded as shown in the illustration. For correct connections, you should also refer to the instruction book supplied with the cartridge. Mount the cartridge on the headshell and fix it loosely with the nuts and screws.

Overhang adjustment

- Mount the cartridge-equipped headshell loosely to the tonearm.
 - Place the overhang gauge (supplied) on the platter so that its notch fits snugly around the spindle on the side opposite to the arm support.
 - Move the tonearm toward the center of the platter. Holding the headshell, move the loosely-mounted cartridge back and forth until the stylus tip is at a point on an imaginary line drawn between the spindle and the arm support where such a line crosses the curved line printed on the gauge.
 - Taking care not to move the adjusted cartridge; tighten the headshell fastenings.
- Overhang is the distance "L" between the center spindle and the stylus tip when the tonearm is moved to the position as illustrated. The overhang of your turntable's tonearm is 15mm.