

PRECAUTIONS

Cautions prior to operation

- * Avoid exposing the turntable (as well as your amplifier and other audio equipment) to rain or direct sunlight.
- * Avoid exposing the turntable to dust and excessively warm or cold temperatures.
- * Place your turntable on a solid, vibration-free surface.
- * Avoid placing your turntable on an inclined surface, otherwise unbalanced stylus tracking will deteriorate overall performance. See that the surface of a record, when placed upon the platter, is horizontal.
- * The surface of the cabinet is treated by a special process. When cleaning it, use a soft cloth. When the surface is excessively dirty, clean it gently with cloth moistened with a diluted detergent and water solution.

Power voltage

Your turntable is adjusted in our factory to operate on the power voltage of the area where you purchased it. Therefore, should you move to an area where the voltage is different from the factory-adjusted one, you have to make the voltage changeover. Make the changeover referring to the attached voltage/frequency changeover sheet.

If, however, the area where you bought your turntable is one where users are prohibited from making such changeover, changeover is not possible. In other areas, consult with your nearest electric appliance dealer about the specific voltage adjustor you need.