
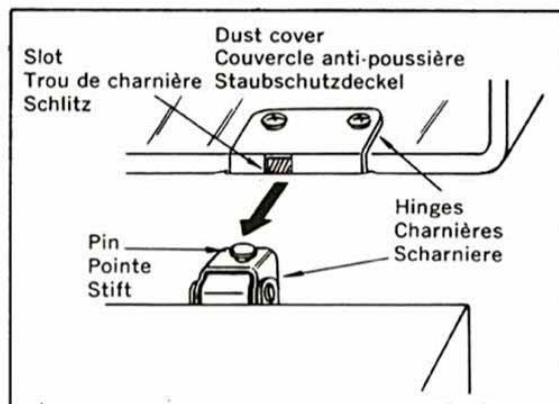


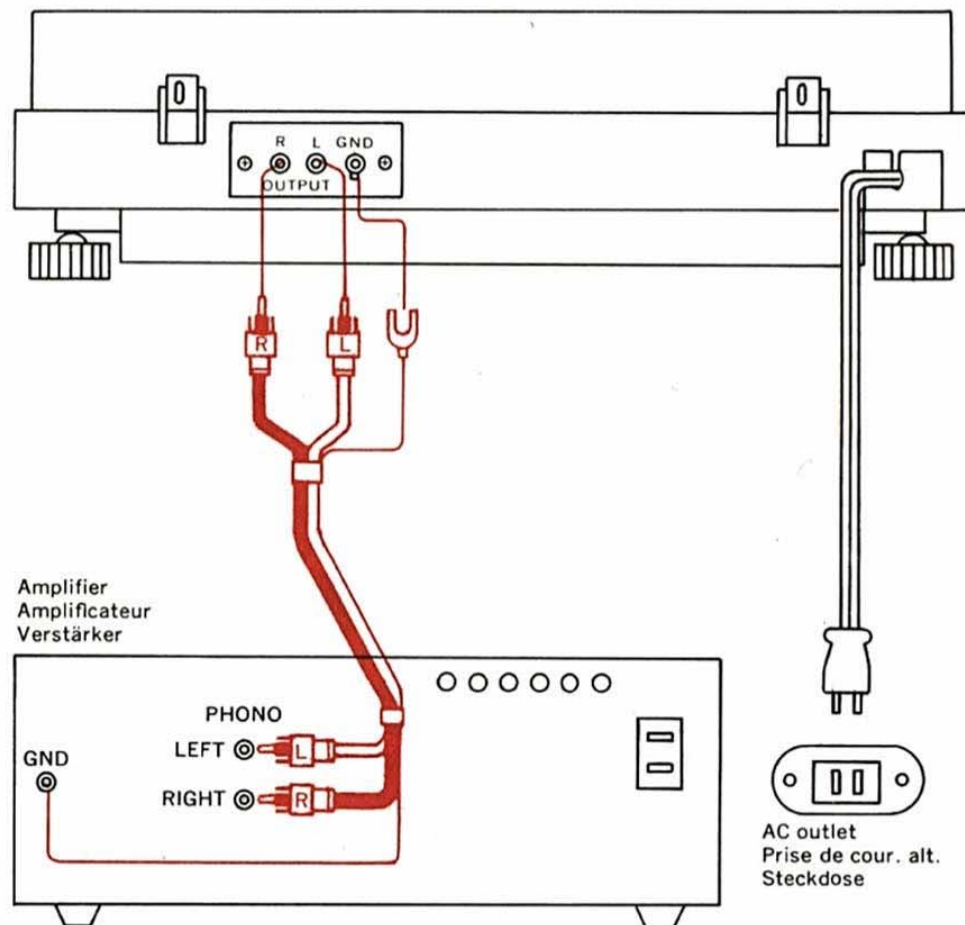

Connections with amplifier

The output cables supplied with your turntable are of the low-capacitance type, suitable especially for CD-4† record playback. These cables should be used to connect the turntable with the "PHONO" terminals on your amplifier.

†TM JVC, Inc.

Grounding

A third vinyl-coated cable runs along the output cables. This is the grounding cable to be connected between the turntable's "GND" terminal and the grounding terminal on your amplifier to prevent low-frequency hum.

Mounting dust cover

Insert the hinge pins of the turntable cabinet into the slots of the dust cover hinge, and slide the cover in the direction of the arrow until it locks into place, as illustrated. To remove the dust cover, reverse the above steps.