
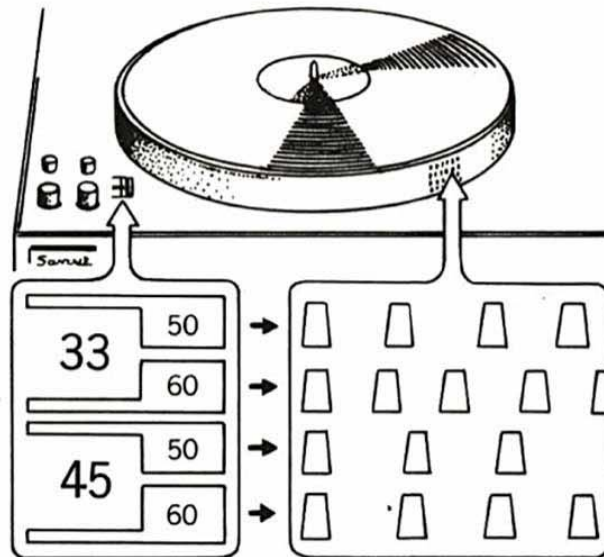


Fine speed adj. controls  
Boutons de réglage fin de vitesse  
Feinregler

Speed selector buttons  
Boutons sélecteurs de vitesse  
Drehzahlwahlknöpfe

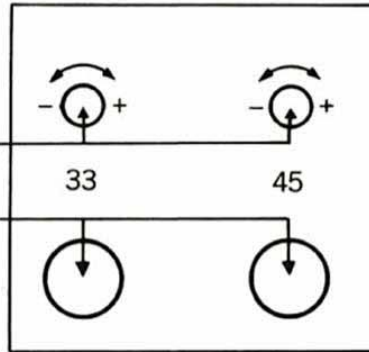

## Speed change and fine adjustments

1. Place a record on the platter and push the speed selector button to "33" or "45," depending on the speed of the record you are about to play.
2. Set the arm lifter lever to LIFT.
3. Turn the cueing lever to START/STOP and hold it for about one second. When you release it, the platter will start rotating.
4. Observe the strobo marking pattern on the periphery of the platter corresponding to the speed of the record (33 or 45rpm) and the power supply frequency (50Hz or 60Hz) of your area. Refer to the explanation of the four rows of strobo markings at left.
5. Turn the fine speed adjustment control (33 or 45rpm) until the related strobo marking pattern appears to be stationary.
6. When the cueing lever is set to START/STOP again, the platter will stop turning and power will be turned off.