

Record size selector lever

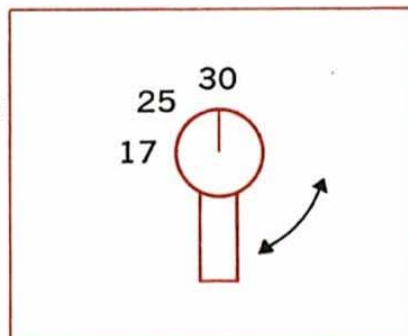 
Sets to play 17 cm, 25 cm or 30 cm records in both automatic and manual operation.

Levier sélecteur de taille de disque.

Le régler pour passer des disques de 17 cm, 25 cm ou 30 cm aux modes de réglage manuel et automatique.

Wahlhebel für Schallplattengröße

Für Einstellung der Schallplattengröße auf 17, 25 oder 30 cm bei automatischem oder manuellem Betrieb.

**Cueing lever**

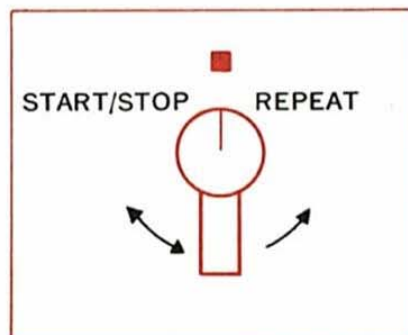 
Starts, stops and repeats record play.

Levier pilote

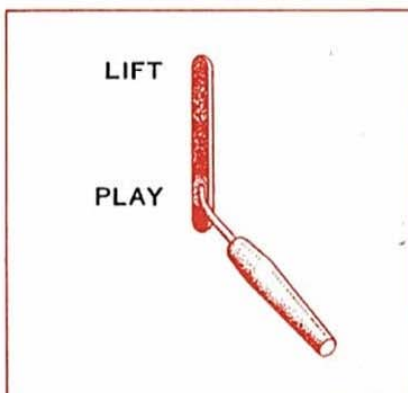
Démarre, arrête et répète 1, écoute de disque.

Bedienungshebel

Für Start, Stop und Wiederholung von Schallplattenwiedergabe.

**Arm lifter lever**

Levier de lève-bras acoustique
Tonarmlift

**Starting record play**

1. Set the record size selector lever to "30," "25" or "17" depending on the size of the record you are about to play.
- The lead-in mechanism of your unit is pre-adjusted for these three types of standard-size records. Therefore, irregular-size records require manual operation.
2. Pull the arm lifter lever to PLAY.
3. Depending on automatic or manual operation, follow the instructions below.

Automatic operation:

Turn the cueing lever to START/STOP; then hold the lever for about one second in that position before releasing it. On the other hand, if you desire to hear the record repeatedly, set the cueing lever to REPEAT; the lever will lock in that position.

The tonearm will then automatically move to the pre-set position, and gently descend on the record surface and play begins.

Manual operation:

Move the tonearm from its rest to a point above the desired selection of the record you are about to play. Turn the cueing lever to START/STOP; the tonearm will descend to the record surface and play begins.

4. Adjust tone and volume to your liking with the controls on your amplifier.

Use of arm lifter lever

You can lift or lower the tonearm at any time during the play of a record. Use the lever if you want to stop play temporarily or skip any portion of the record in play. The tonearm ascends when the arm lifter lever is set at LIFT; it descends when the lever is set at PLAY. Usually, the lever should be in the PLAY position.